



Steam Mop Model SM600



Care and Use Instructions for the Steam Mop

Customer Services, Ewbank Products Ltd, Billington Road, Burnley
Lancashire, BB11 5ED.

Tel: 01282 835 841

www.ewbank.co.uk

Steam Mop



Thank you for purchasing your Steam Mop, we hope you enjoy using it.

Please read the manual carefully to get the most out of your product.

Pack contents:

- Steam Mop body
- Two piece handle
- 2 fabric cloths
- Carpet glider
- Standing pad
- Measuring jug

Read the instruction booklet before using the Steam Mop make sure that...

 
 
 
 
- The cable is in perfect condition
- All packaging materials are removed from the product.

Assembling the Steam Mop

- Assemble the handle by pushing the two sections together – see image below (Fig.2).
- Insert the bottom of the handle into the location on the Steam Mop and rotate until the metal stopper is located in its hole (Fig.3).

WARNING

- During use, do not tip the body of the steam mop back (Fig.4), or lift it off the ground so that the body hangs vertically (Fig.5).

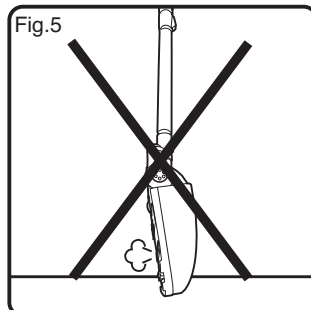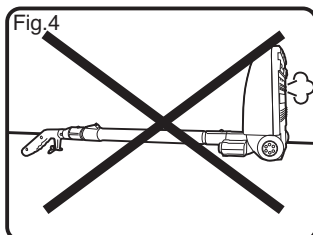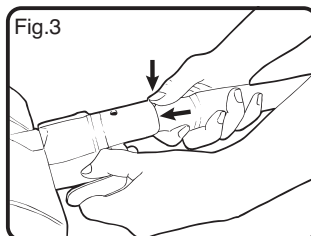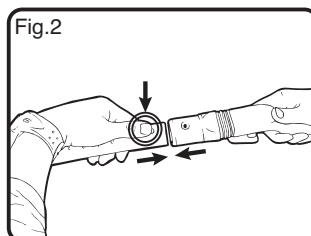

**CAUTION BURN HAZARD - STEAM IS GENERATED AT 100°C
DO NOT USE AROUND SMALL CHILDREN AND PETS**

Steam Mop

How to use your Ewbank Steam Mop

- When setting up. Make sure the unit is NOT plugged into the mains.
- Unit is supplied with carpet glider in position. If using on hard floor, remove carpet glider (Fig.2) using tabs on each side, before attaching the fabric cloth (Fig.3).
- Unscrew the cap of the water tank.
- When empty, using the measuring jug supplied, add 400ml of water to the tank and screw the top on firmly (Fig.4).
- Place plug into the wall socket and turn on.
- With the unit resting on the standing pad, use the foot operated on/off switch to turn the unit on.
- When the unit is on, the "on" light will illuminate.
- After approximately three minutes the steam starts emitting slowly. At this point the machine is ready for use. A small amount of water discharge may be seen, this is normal, at first.
- To clean your floor, move the unit slowly across the floor.
- For tough stains on carpet, additional cleaning may be required.
- To release go flat handle, place your foot on the rear of the unit and push the handle towards the floor.
- As the unit uses water, the indicator light will illuminate intermittently.
- When the light is constant, the unit must be refilled. A full tank will last up to 20 minutes on a hard floor.
- The unit must be turned off at the wall prior to refilling.
- When you have finished cleaning, use the foot operated on/off switch to turn the machine off.
- After a period of 20 minutes the cap can be removed and the unit emptied of any remaining water.
- The fabric cloth is hand washable.
- Please note, the wheels on the product are not intended to be in contact with the floor when in use.

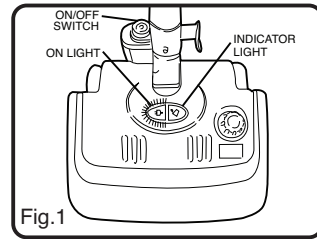 


Fig.1

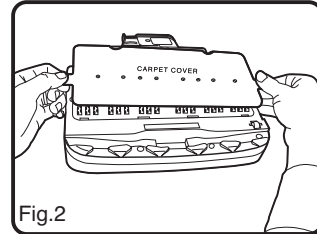 


Fig.2

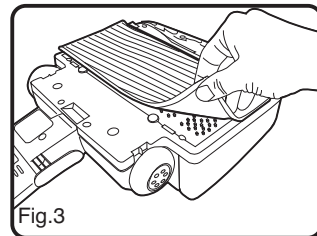 


Fig.3

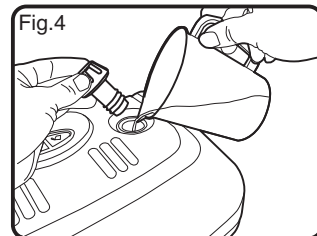 


Fig.4

CAUTION

- When Steam Mop is warming up or cooling down, ensure that it is placed on the standing pad to avoid damage to flooring.
- If removing pads, or carpet glider before it is allowed to cool, use appropriate safety gloves.

Steam Mop

Caring for your Steam Mop

In hard water areas your Ewbank Steam Mop may benefit from occasional descaling using suitable descaler solution.

Technical data

- 600W boiler
- 5m cord
- Boiler temperature – 150°C – 170°C
- Water capacity – 400ml
- Steam up time – 3 minutes
- Working time – 20 minutes
- Product Dimensions – 120cm x 19.8cm x 25.4cm
- Adjustable handle has 16 settings

Spares

Spare fabric cloths and other spares are available from our Burnley office, see details below.

CAUTION

- Do not expose the product to extreme temperatures. Store in a cool, dry place.
- Ensure that the Steam Mop is switched off when fitting or removing the fabric cloth or carpet attachment.
- Do not let children use this product unsupervised or as a toy.
- Do not use with the cap removed.
- Do not direct steam towards electrical equipment.
- Keep the main body of the machine level during operation.
- Do not touch the plug with wet hands.
- Do not overfill the water tank as this may cause excessive “hot” water discharge or water leakage.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

INFORMATION ON THE DISPOSAL OF WASTE ELECTRICAL EQUIPMENT KNOWN AS WEEE

Your attention is brought to new directives applicable to the disposal of this electrical equipment, where in accordance with the legislation this product must not be disposed of in your normal household waste. Instead it is your responsibility to dispose of this type of waste by handing it over to special designated collection points for recovery and recycling. This product is marked with a ‘Wheellie bin’ symbol with a cross on it to remind you of this action. The objective of this directive is to help conserve resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste please contact your local authority, take back facilities are free of charge.



Your Guarantee

This product is covered by a 12 month guarantee.

This does not cover normal wear and tear or abuse.

For guarantee purposes, please retain your original receipt as proof of purchase.

This guarantee does not affect your statutory rights.

For spares, service and further information please contact;

Customer Services, Ewbank Products Ltd, Billington Road, Burnley, Lancashire, BB11 5ED

Tel: 01282 835841

www.ewbank.co.uk

Made in China

EB0020 08/09