 




Cascade

Model 280

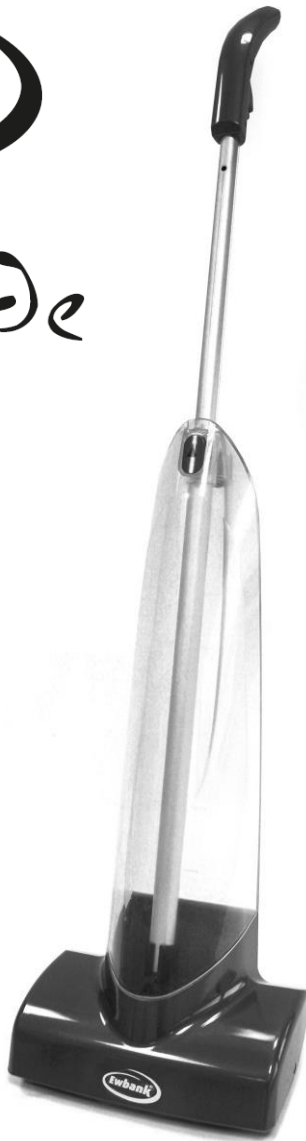

Care and Use Instructions

Ashcombe Court, Woolsack Way, Godalming, Surrey,
GU7 1LQ, UK

Tel: + 44 (0)1483 663 050

Email: enquiries@ewbank.co.uk


www.ewbank.co.uk



Cascade

Manual Carpet Shampooer

The Cascade is intended for the domestic market. It is designed to be used on carpets & rugs. Best results will be obtained by reading the following instructions carefully.

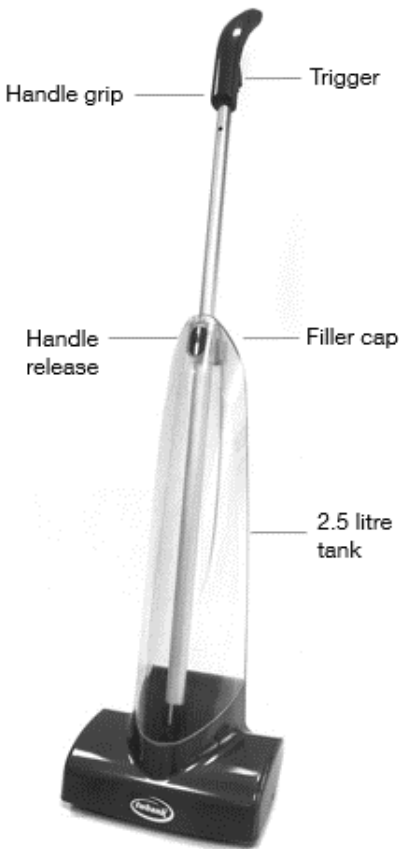

Before use

Please read any Safety Data Sheet accompanying Shampoo products.

Vacuum the carpet to remove surface debris before applying the foam shampoo.

It is advisable to test the carpet for colour fastness prior to use. To do this, mix a little of the foam shampoo and water to the specified dilution, apply to a clean cloth and then clean a small area of carpet, ideally one which is normally hidden from view.

Shampoo

For best results the shampoo should be mixed: 10 part water to 1 part shampoo i.e. 10 cups of water to 1 cup of shampoo, or using the filling marks on the rear of tank produces the same results (10 to 1 mix).

How to use your Ewbank Cascade



How to fill

Turn the filler cap at the top of the tank 1/4 turn to the right and remove (Fig.2).



Markings on tank

Add water to the water level marked on the tank then add shampoo to the shampoo level (Fig.3) for cleaning large areas. Replace the filler cap and turn 1/4 turn to the left. If spot cleaning, mix 300ml (10 oz.) water to 30 ml (1 oz.) shampoo.



Press the handle release

Press down on the top of the handle release button then extend the handle by gently pulling upwards until handle locks in place (Fig.4).



Using the trigger

When the handle is locked in positions you will feel a spring loaded action in the trigger (Fig.5).




Cleaning

Squeezing the trigger will release the valve in the head of the unit allowing the shampoo and water mixture to be applied to the foam roller. Using short overlapping strokes the mixture will be applied to the carpet or rug – **DO NOT OVERWET** the cleaning area (Fig. 6). Releasing the trigger will stop the flow of shampoo/water mixture, although the roller will remain wet for a time afterwards. After use let the carpet or rug dry completely, then vacuum or use your carpet sweeper to remove the deposits lifted by the foam shampoo.

Note: The drying of the carpet generally takes 3-4 hours.

How to clean your Ewbank Cascade

After use pour out any unused solution and clean by rinsing out the tank with a small amount of clean water. Pull up on the trigger a number of times to run the clean water through the system. Clean the head by rinsing the roller and brushes under a tap. The shampooer must be thoroughly clean and dry before storing.

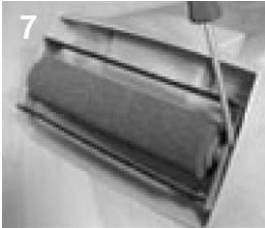

Removing roller

If necessary you can remove the roller and brush head assembly for cleaning. Do this by inserting a flat head screw driver between the main moulding and the brush rocker arm and gently levering out (Fig.7).

You may be able to purchase additional shampoo from the company you purchased the product from or if they do not stock these items you can contact our customer service department.

Your Guarantee

This product is covered by a 12 month guarantee.

This does not cover normal wear and tear or abuse.

For guarantee purposes, please retain your original receipt as proof of purchase.

This guarantee does not affect your statutory rights.

For spares, service and further information please contact;

Ewbank Products Ltd., Ashcombe Court, Woolsack Way, Godalming, Surrey, GU7 1LQ

Tel: 44 (0)1483 663 050, opening hours Mon - Thurs 8:30am - 5pm and Fri 8:30am - 3:45pm

www.ewbank.co.uk

Made in China

EB0362 03/15