



Evolution 3 Manual Carpet Sweeper
Model 830



Care and Use Instructions

Ewbank Products Ltd. Ashcombe Court,
Woolsack Way, Godalming,
Surrey, GU7 1LQ, UK

Telephone: +44 (0) 1483 663 050

Email: enquiries@ewbank.co.uk

Website: www.ewbank.co.uk



Thank you for purchasing your Ewbank Evolution 3 Manual Carpet Sweeper.
We hope you enjoy using it.

**Please read the manual carefully to get the most out of your product
and retain these instructions for future reference.**

Pack Contents:

- 1) Evolution 3 sweeper unit
- 2) 3 piece handle
- 3) Instruction manual (not shown)



**Read the instruction manual carefully before using the Evolution 3 Manual Carpet Sweeper
and make sure that:**

- All contents are present as shown
- All packaging materials are removed from the product before use

Product Features

- The Evolution 3 has 2 brush height settings making the unit suitable for most carpeted areas of the home. The LO setting should be used on low pile carpets and rugs while the HI setting is best suited for the cleaning of longer pile carpets.
- The handle will drop into a horizontal position (clearance is 8.5 cm / 3.4 inches) enabling sweeping under furniture or into areas where a larger vacuum cleaner could not reach.
- The Evolution 3 features a quick and easy dirt emptying mechanism.

Product Assembly

Step 1: Assemble the handle by screwing the shortest section into the pivot arm of the sweeper unit. Do not over tighten.

Step 2: Screw the middle section into the pole already attached to the sweeper. Do not over tighten.

Step 3: Finally screw in the largest section which has a foam grip handle. Do not over tighten.

Your Evolution 3 is ready to use.



Product Disassemble/Storage

Follow the assembly instructions in reverse order;

1. Unscrew the top handle section.
2. Unscrew the middle section.
3. Unscrew the bottom section from the black pivot arm of the sweeper.

Product Use

Turn the knob on top of the Evolution sweeper to select either HI or LO brush height as required for the carpet surface to be cleaned. HI is best suited for longer pile or thicker carpets. LO should be used on low pile carpets and rugs.



Push the Evolution 3 sweeper along the carpet surface to be cleaned at a steady pace keeping the sweeper unit level to the floor to remove everyday dust and dirt leaving your carpets clean and free of debris.

To Empty the Sweeper

Empty your sweeper regularly to ensure maximum efficiency.

To empty, hold the sweeper over a bin and lift the lever located on the top of the sweeper (see picture 1).

Tip the unit forward to clean the front pan and then tip the unit backward slightly to empty the rear pans (see picture 2).

Release the lever to close.

Picture 1



Picture 2



Cleaning and Care of your Evolution 3 Sweeper

Regularly check the brushes and remove trapped fluff and debris to keep your sweeper operating at maximum efficiency. The case can be wiped with a damp cloth but do not immerse the unit in water or other liquids.

Your Warranty

This product is covered by a 12 month guarantee.
This does not cover normal wear and tear or abuse or replacement of parts other than specified.
For guarantee purposes, please retain your original receipt as proof of purchase.

This guarantee does not affect your statutory rights.

For spares, service and further information please contact;

Ewbank Products Ltd,

Ashcombe Court, Woolsack Way,
Godalming, GU7 1LQ, UK.

Email: enquiries@ewbank.co.uk.

Tel: +44 (0)1483 663 050,

opening hours Mon – Thur 8:30am - 5.00pm, Fri 8:30am – 3.45pm

Telephone: +44 (0) 1483 663 050 Email: enquiries@ewbank.co.uk

www.ewbank.co.uk

Ewbank Products Ltd. Ashcombe Court,
Woolsack Way, Godalming, GU7 1LQ, UK
Tel: +44 (0)1483 663 050
Email: enquiries@ewbank.co.uk
Web: www.ewbank.co.uk

2014© Ewbank Products Ltd.
EB0564 03/2015

Made in China