



**Powered Carpet
Shampooer
Model ES600**



Care and Use Instructions

Customer Services, Ewbank Products Ltd, Billington Road, Burnley
Lancashire, BB11 5ED.

Tel: 01282 835841

www.ewbank.co.uk



Thank you for purchasing your Ewbank® Powered Carpet Shampooer, we hope you enjoy using it.


Please read the manual carefully to get the most out of your Ewbank® product.

Safety Instructions - CAUTION

- Do not allow the machine to run unattended at any time.
- Close supervision is required when this machine is used near children. This product is not a toy.
- This machine is designed for household use only.
- This appliance is not intended for commercial use.
- Do not expose to rain.
- Use extra care when using near stairs or step-ladders.
- To provide continued protection against the risk of electric shock, connect to grounded outlets only. It is recommended that a RCD (residual current device) rated at 30mA is fitted into the mains supply socket for added protection from electric shock.
- Do not immerse the cord, plug or machine in water or any other liquid.
- Do not operate with a damaged mains lead.
- Do not try to move the machine, pull or carry by the mains lead.
- Do not close doors on mains lead, or pull mains lead around sharp corners. Keep the mains lead away from hot or heated surfaces.
- Unplug the machine when not in use. Turn off all controls before unplugging from electrical outlet.
- Do not unplug by pulling on the mains lead.
- Never handle the plug or machine with wet hands.
- Store machine in a dry place. Do not expose to freezing temperatures.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not stand on the machine.
- The equipment must be unplugged after use and before cleaning.

Powered Carpet Shampooer

Powered Carpet Shampooer Contents

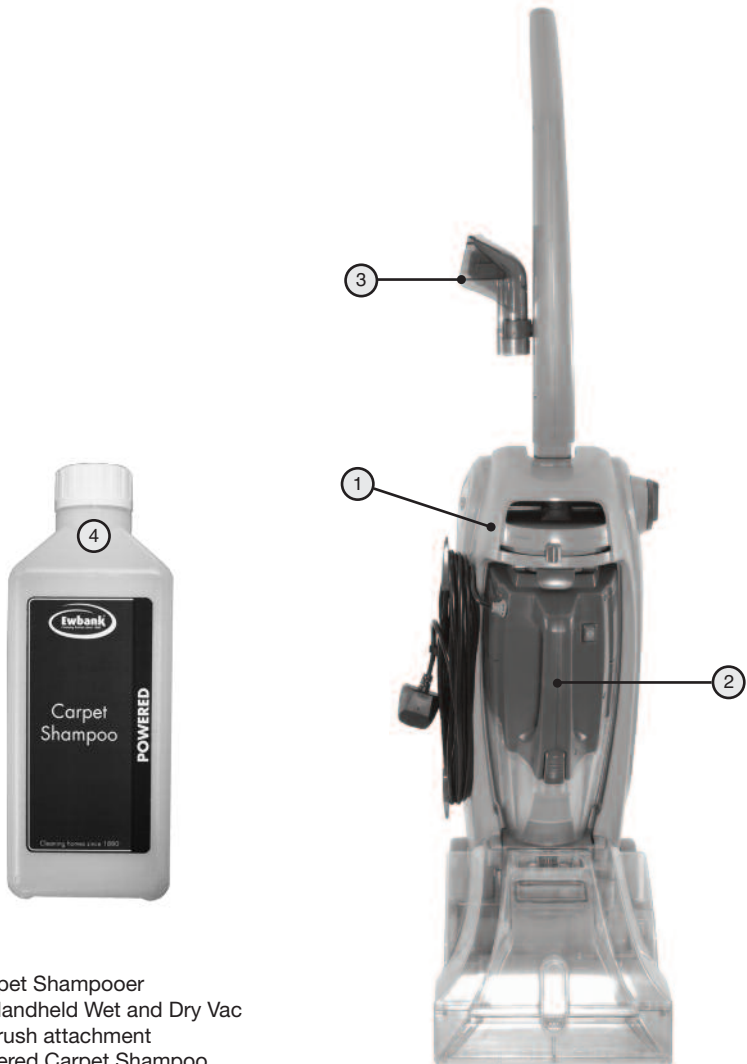

1. Powered Carpet Shampooer
2. Detachable Handheld Wet and Dry Vac
3. Upholstery Brush attachment
4. Ewbank Powered Carpet Shampoo

Please familiarise yourself with the product and accessories by reading this guide before use. Before using the product, please ensure that...

- The power cable is in good condition.
- **ALL** packaging material has been removed from the product, and all accessories have been removed from the packaging and are accounted for.

Preparing for first time use




Do not use your Powered Carpet Shampooer as a dry vacuum cleaner

- Due to the design of the Ewbank Powered Carpet Shampooer, we recommend that the complete unit not be used as a dry vacuum, but as a carpet shampooer. The removable handheld wet and dry vacuum component can be used as a dry vacuum.


Assembling the handle

- Align the handle to the main unit, insert the push-rod into the aperture, and push downwards until a solid “click” is heard.

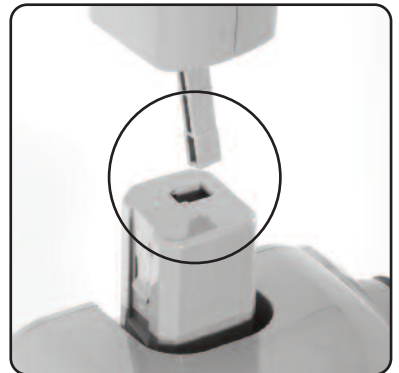

Preparation of your carpet and work area

- Clear the carpet area as much as possible, and vacuum thoroughly with your regular dry vacuum cleaner.
- Before using shampoo on your carpet, Ewbank recommend you test the colourfastness of your carpet by applying shampoo to a small area of carpet, gently rubbing with a cloth, and vacuuming with the handheld wet and dry part of the Powered Carpet Shampooer. If the cloth remains clean, and un-coloured by the carpet colouring, it should be safe to continue cleaning the carpet.

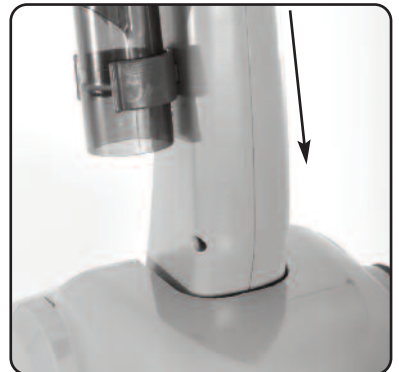

Powered Carpet Shampooer

Getting to know your Powered Carpet Shampooer

Preparing for first
time use

Page 6

Preparation of your
work area

Page 6

Tips to aid
cleaning

Page 7

Emptying the waste
chamber

Page 10

Filling the
shampoo tank

Page 8

The handheld wet &
dry vac

Page 11

Storing your Powered
Carpet Shampooer

Page 13

FAQ's

Page 14



Using your Powered Carpet Shampooer

Prepare your work area...

- Ensure the area of carpet you wish to shampoo is clean, and free from loose dirt by vacuuming it before shampooing.
- If possible, prepare the area first by removing as much loose furniture as possible.

After Cleaning...

1. Allow the carpet to dry fully before returning the furniture to the area. If you cannot wait until the carpet has dried, consider placing the furniture on a suitable protective material to prevent any colour running from the furniture to the carpet.
2. Try not to walk on the carpet before it has dried. If you must walk on the carpet, consider laying protective covering over the areas to be walked on.



Tips to aid cleaning...

For best results, use **Ewbank Powered Carpet Shampoo**

Try to avoid saturating the carpet, as the vacuum component may not remove all the shampoo. Light application will ensure all the shampoo is removed.

For heavily soiled areas, repeat application may be necessary.

Start at the point furthest away from your exit point, working towards the exit point.




Powered Carpet Shampooer

Using your powered carpet shampooer

Preparing for use


- Remove the water tank from the rear of the shampooer by pulling up and away from the main unit.
- Unscrew the cap and add cleaning solution to the tank as instructed by the directions given on the cleaning solution packaging and top up the tank with warm water.

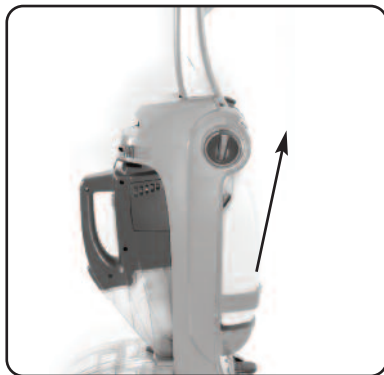

E-tip The cap to the shampoo tank holds 30ml, and the tank holds 1 litre of liquid. Use the cap to measure 30ml of shampoo and add 1 litre of warm water. These measurements are given for the **Ewbank Powered Carpet Shampoo**, other brands may have different measurement directions. Please consult the directions given by the supplier.




Return the tank to the unit, ensuring it has been pressed firmly into place.

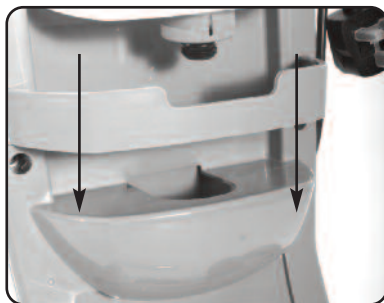

Using your powered carpet shampooer


Shampooing your carpet

- Plug your powered carpet shampooer into a wall socket, and power on the unit using the switch located on the handheld wet and dry vacuum cleaner. Ensure the release mechanism is in the lock position.

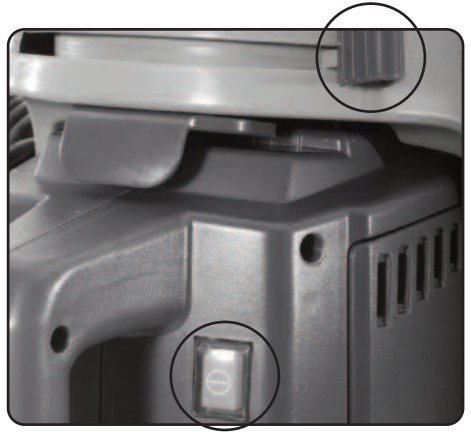


Depress the foot pedal to unlock the unit from its upright position, ready for use.

E-tip The carpet shampooer trigger releases the shampoo into the carpet, whilst the brush agitates it into the pile. If the trigger is depressed whilst pulling the Powered Carpet Shampooer backwards, it will vacuum the shampoo straight into the waste chamber without agitating it into the carpet pile.

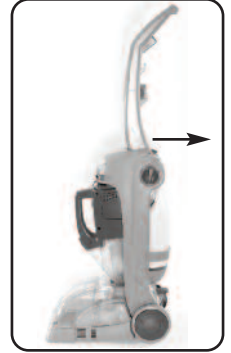


The ideal operation of the Powered Carpet Shampooer is to clean the area in strips; depressing the trigger and releasing shampoo into the carpet whilst pushing the Powered Carpet Shampooer forwards, then vacuuming a previously laid shampoo strip.

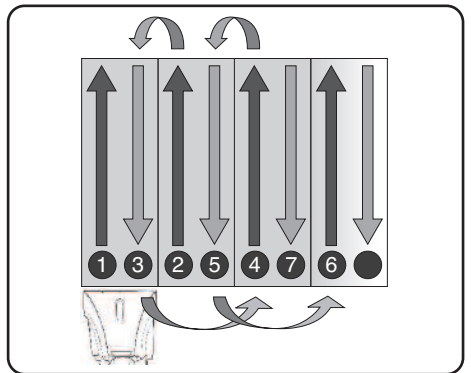

Powered Carpet Shampooer




Emptying the waste container

- Switch the unit off, and unplug from the mains power socket.
- In a clear area, depress the foot pedal, and tip the powered carpet shampooer back, resting it horizontally on the floor, allowing access to the rear of the main waste chamber.

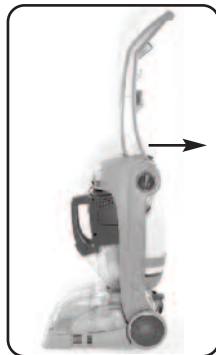


Push the release clip towards the body of the unit (1), and gently lift the waste chamber away from the unit, avoiding any spillage that may occur.

Once over the sink, push the release clip (2) to release the waste chamber lid and pour away the waste, rinsing if necessary.

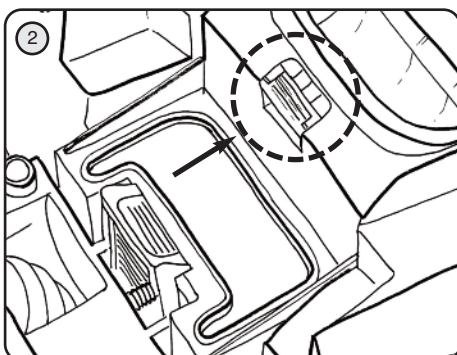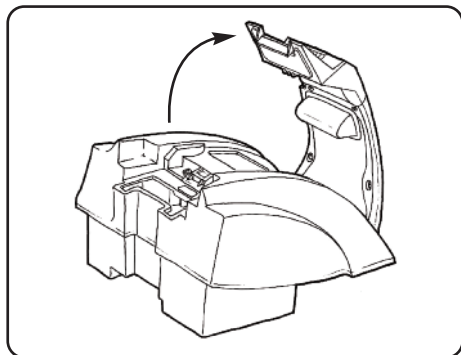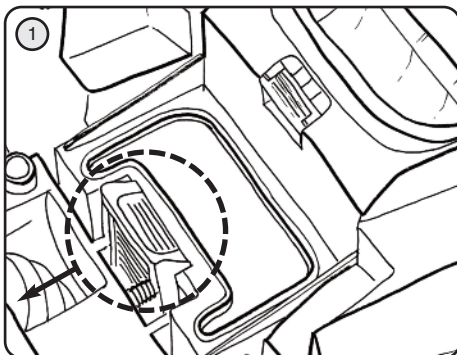

Using your handheld wet and dry vac

Unlock the handheld vac from the unit by moving the lock from the right hand locked position to the left hand unlocked position.

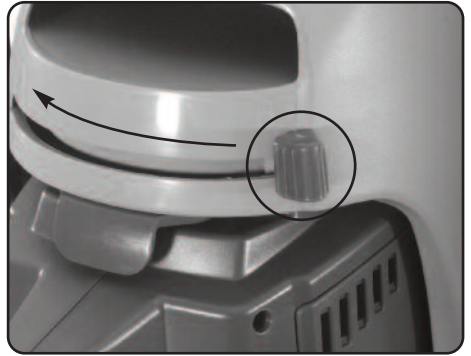

Pull the upper half of the handheld vacuum out of the main unit, then lift the handheld unit up and away from the main unit.




Powered Carpet Shampooer

Using your handheld wet and dry vac


The handheld vacuum cleaner can be used on wet and dry dirt. The brush attachment will allow spot cleaning and localised scrubbing of carpet and upholstery.



Emptying your handheld wet and dry vac

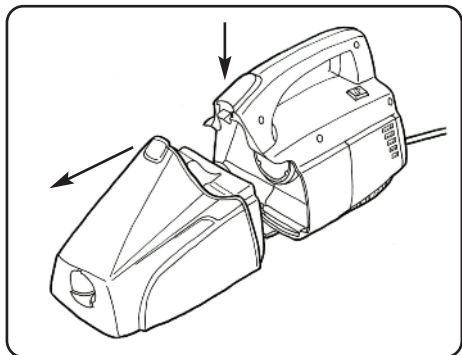

To remove the waste chamber for emptying and cleaning, press the release button, and carefully remove the container so as to prevent any spillage that may occur.

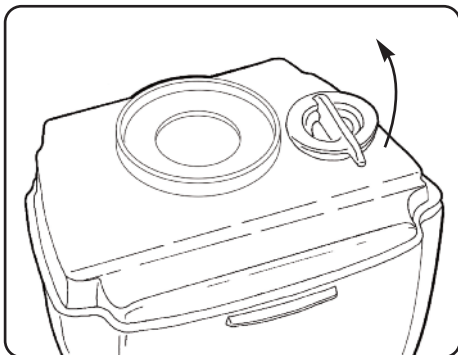


Remove the rubber cap, and pour the waste away, rinsing to remove any residue.

Storing your Powered Carpet Shampooer

- In order to maintain and care for your powered carpet shampooer, it should be emptied and cleaned before being put away.
- Ensure that the waste tanks are empty, and have been rinsed clean of any loose dirt.
- Ensure that the Shampoo tank has been emptied before returning the tank back into place on the unit.

E-tip To aid storing the Powered Carpet Shampooer, the handle can be folded away. Rotate the handle-release catch, and lower the handle to the rear of the unit.

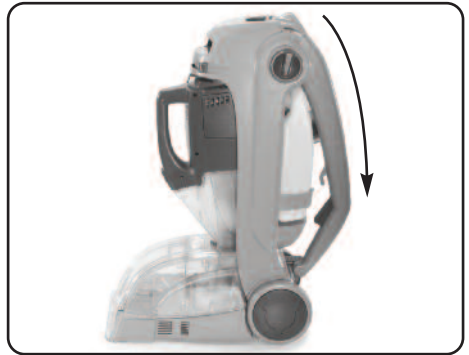

Powered Carpet Shampooer

Product FAQ's

Q. The brush has stopped rotating on my Powered Carpet Shampooer. What do I do?

- A. Press the RESET button on the side of the unit. This will reset the operation of the brush, and allow it to start rotating again.

Q. I seem to be using shampoo very quickly. Why is this?

- A. The carpet shampooer trigger releases the shampoo into the carpet, whilst the brush agitates it into the pile. If the trigger is depressed whilst pulling the Powered Carpet Shampooer backwards, it will vacuum the shampoo straight into the waste chamber without agitating it into the carpet pile.

Q. The stains on my carpet are still visible, what do I do?

- A. Your carpet may need another pass with the powered carpet shampooer. Refer to your carpet shampoo provider to see if alternative concentrate levels are suggested. You may also need to spot clean your carpet using a high concentrate of carpet shampoo and the handheld wet and dry vac component.

Q. Can I use cold water in my Powered Carpet Shampooer?

- A. Yes, but it may be less effective than using warm water. Refer to your carpet shampoo provider to see if an alternative water temperature is suggested.

Q. Can I use boiling water with my Powered Carpet Shampooer?

- A. Boiling water is not recommended, as it may damage the Powered Carpet Shampooer, remove the colour from your carpet, or cause your carpet to shrink.

Powered Carpet Shampooer

Technical data

Voltage:	230-240v 50-60Hz
Vacuum Power:	600W
Weight:	7.5 kg
Water tank capacity:	1.7L
Waste capacity:	2.0L
Power cable length:	7m



INFORMATION ON THE DISPOSAL OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT KNOWN AS WEEE

Your attention is brought to new directives applicable to the disposal of this electrical equipment, where in accordance with the legislation this product must not be disposed of in your normal household waste. Instead it is your responsibility to dispose of this type of waste by handing it over to special designated collection points for recovery and recycling. This product is marked with a 'Wheelie bin' symbol with a cross on it to remind you of this action. The objective of this directive is to help conserve resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste please contact your local authority, take back facilities are free of charge.



Your Guarantee

This product is covered by a 12 month guarantee.
This does not cover normal wear and tear or abuse.
For guarantee purposes, please retain your original receipt as proof of purchase.
This guarantee does not affect your statutory rights.
For spares, service and further information please contact;
Customer Services, Ewbank Products Ltd, Billington Road, Burnley, Lancashire, BB11 5ED
Please phone our helpline Tel: 01282 835841 between 9am - 5.30pm Monday to Friday.
www.ewbank.co.uk

Made in China

2010 © Ewbank Products Ltd

EB0215 14/11/2010