



## Compact Wet & Dry Vac Model WD800



### Care and Use Instructions

Customer Services, Ewbank Products Ltd, Billington Road, Burnley  
Lancashire, BB11 5ED.

Tel: 01282 835841

[www.ewbank.co.uk](http://www.ewbank.co.uk)

## Compact Wet & Dry Vac



Thank you for purchasing your Compact Wet & Dry Vac,  
we hope you enjoy using it.

Please read the manual carefully to get the most  
out of your product.

### Pack Contents:

- 1 - WD800 Unit
- 2 - Hose
- 3 - Wet Floor Tool
- 4 - Carpet Brush
- 5 - Upholstery Brush
- 6 - Crevice Tool
- 7 - Extension Tubes x2
- 8 - Dust Filter (inside)
- 9 - Foam Filter (inside)

**Read the instruction book before using the  
Compact Wet & Dry Vac and make sure  
that...**

- The cable is in perfect condition.
- All packaging materials are removed from the product.



## **Compact Wet & Dry Vac**

### **Safety Instructions - CAUTION**

- Unplug appliance when not in use.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Only use manufacturer's recommended attachments.
- Do not use the product if it has been dropped, damaged, left outdoors or dropped in water.
- Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners.
- Do not run appliance over cord.
- Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle the plug or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is smoking such as cigarettes, matches or hot ashes.
- Turn the product off before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they are present.
- Keep end of hose, tubes and other openings away from your face and body.
- Do not use the vacuum cleaner without the dust cup filter in place.
- Always unplug this appliance before connecting or disconnecting vacuum hose.
- Store the vacuum cleaner indoors and always put the appliance away after use to avoid tripping accidents.
- Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on the rating label.
- Do not use for any purpose other than those described in this instruction manual.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not attempt to dismantle this device, all servicing or replacement cords must be carried out by an authorised Ewbank personal or appointed agents.

## Compact Wet & Dry Vac

### Assembling the Appliance



- Open the box and remove the product and all attachments (Fig.1).
- Fit the suction hose onto the suction inlet and turn it in the direction of the arrow in order to lock (Fig.2).
- Connect the extension tubes to the hose.
- All suction nozzles can be fitted directly to the flexible hose or the extension tubes.
- Either one or two tubes may be used. It is possible to use the flexible hose and tubes without using a nozzle.

### Instructions for Use

- Before operating the Compact Wet & Dry Vac, ensure that the required attachments are fitted, that the electrical cord has been unwound.
- Plug the product into the mains supply and switch the product on or off using the switch on the motor housing.

### Vacuuming Dry Solids

- For general vacuuming, use the 1.1m flexible hose. Suction power can be altered by moving the suction regulator on this attachment (Fig.4).
- For cleaning awkward crevices, use the crevice tool (Fig.4).
- For carpets, use the carpet brush (Fig.5).
- For upholstery, use the upholstery brush (Fig.6).

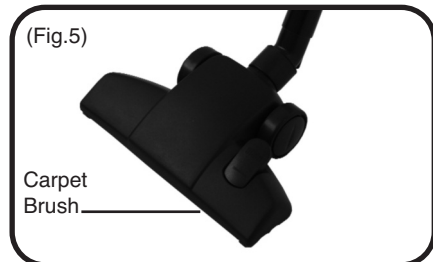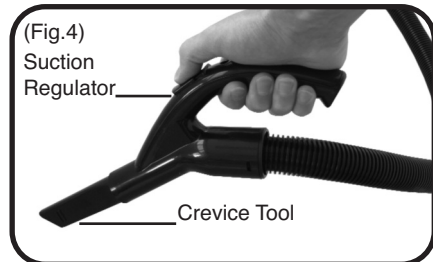


**Compact Wet & Dry Vac****Vacuuming Dry Continued...**

- Ensure that the foam filter is installed before operating (Fig.7) and the dust filter is in the collection chamber

**Empty the Dust Filter**


- To empty the dust filter, release the clips on the side of the product (Fig.8). With the product unplugged, lift the main body of the vacuum out of the collection chamber (Fig.9) and remove the dust filter (Fig.10). Once emptied, replace the dust filter and reassemble the product, ensuring that the clips snap into place.

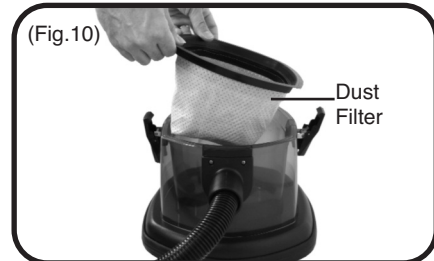

## Compact Wet & Dry Vac

### Vacuuming Liquids

- Before cleaning wet surfaces, remove the dust filter by releasing the clips on the side of the product (Fig.11). With the product unplugged, lift the main body of the vacuum out of the collection chamber and remove the dust filter (Fig.12), before replacing the vacuum body. Ensure that the clips snap into place.
- The product can be used to clean up modest amounts of liquid (maximum liquid capacity is 1.5 litres. Please use supplied attachments as appropriate).
- For vacuuming small puddles of liquid, or for vacuuming liquid from inaccessible places, use the crevice tool (Fig.13).
- To ensure that no residual liquid is left in the attachments, the flexible hose and or whichever attachment has been used, should be lifted up to allow any remaining liquid to run into the liquid collection barrel.
- When vacuuming liquids, a float valve automatically cuts the operation when the maximum fill level has been reached. In this situation you must empty the liquid collection barrel by releasing the side clips and removing the main body of the vacuum. Reassemble the product in order to continue vacuuming.

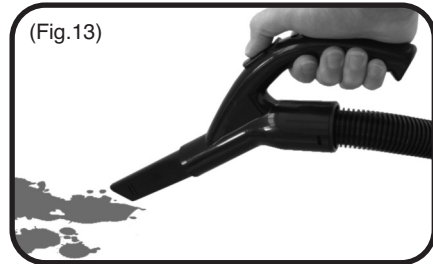

### Important Note

- If the product overturns during use, the float will stop the airflow. Switch the product off at the power socket and right the appliance. Do not switch the product back on until you have heard the float drop back into its normal position.

**Compact Wet & Dry Vac**

**Cleaning the Dust Filter**

- To remove the dust filter, release the clips on the side of the product (Fig.8). Lift the main body of the appliance out of the collection chamber (Fig.9) and remove the dust filter (Fig.14).
- The dust filter can be washed under warm running water. Rinse water from inside out (Fig.15). Allow to dry before using again.



**Troubleshooting Guide**

<b>Problem</b>	<b>Possible Reason</b>	<b>Possible Solution</b>
Vacuum will not operate	1. Power cord not firmly plugged into outlet	1. Plug unit in firmly
	2. No power in wall outlet	2. Check and if necessary replace fuse or breaker
		3. Contact Ewbank for assistance
Vacuum will not pick up or suction power is weak	1. Dust filter is full	1. Empty dust filter (see previous instructions)
	2. Unit clogged up	2. Turn unit off and unplug from wall outlet. Remove dust filter and check for object(s) in the airduct - remove them
	3. Dust filter needs cleaning	3. Clean or replace dust filter (available from Ewbank)
Dust escaping from vacuum	1. Dust filter is full	1. Empty dust filter (see previous instructions)
	2. Dust filter is not installed correctly	2. Review dust filter installation (see previous instructions)
	3. Puncture/hole in dust filter	3. Replace dust filter (see previous instructions)
Vacuum hose or brushes will not pick up	1. Hose clogged	1. Remove hose and/or attachments
	2. Dust filter is full	2. Remove obstruction from hose
		3. Empty and clean dust filter

**Compact Wet & Dry Vac****Technical data**

- 5 metre power cord
- Water capacity - 1.5litre
- Dry capacity - 1.6litre
- Power - 800W

### INFORMATION ON THE DISPOSAL OF WASTE ELECTRICAL EQUIPMENT KNOWN AS WEEE

Your attention is brought to new directives applicable to the disposal of this electrical equipment, where in accordance with the legislation this product must not be disposed of in your normal household waste. Instead it is your responsibility to dispose of this type of waste by handing it over to special designated collection points for recovery and recycling. This product is marked with a 'Wheelite bin' symbol with a cross on it to remind you of this action. The objective of this directive is to help conserve resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste please contact your local authority, take back facilities are free of charge.



### Your Guarantee

This product is covered by a 12 month guarantee.

This does not cover normal wear and tear or abuse.

For guarantee purposes, please retain your original receipt as proof of purchase.

This guarantee does not affect your statutory rights.

For spares, service and further information please contact;

Customer Services, Ewbank Products Ltd, Billington Road, Burnley, Lancashire, BB11 5ED

Tel: 01282 835841

[www.ewbank.co.uk](http://www.ewbank.co.uk)

Made in China

ED0077 10/09