



Steam Mop Rapid

Model SM1500



Care and Use Instructions

Customer Services, Ewbank Products Ltd, Billington Road, Burnley
Lancashire, BB11 5ED.

Tel: 01282 835841

www.ewbank.co.uk

Steam Mop Rapid



Thank you for purchasing your Ewbank® Steam Mop Rapid,
we hope you enjoy using it.

Please read the manual carefully to get the most
out of your Ewbank® product.

Safety Instructions - CAUTION

- Do not direct steam at people, animals or at electrical devices
- Do not operate the steam function without water in the tank
- Do not allow the machine to run unattended at any time
- Close supervision is required when this machine is used near children. This product is not a toy.
- This machine is designed for household use only. Do not expose to rain.
- Do not overfill the steamer water tank. The tank contains a maximum of 750ml of water only.
- Never turn the machine over when it is switched on or if it is still producing steam.
- Use extra care when using near stairs or step-ladders.
- Keep all parts of the body away from the jet of steam.
- Do not operate the steam functions in bare feet or whilst wearing open-toed footwear.
- To provide continued protection against the risk of electric shock, connect to grounded outlets only. It is recommended that a RCD (residual current device) rated at 30mA is fitted into the mains supply socket for added protection from electric shock.
- Do not immerse the mains lead, plug or machine in water or any other liquid.
- Do not operate with a damaged mains lead.
- Do not try to move the machine, pull or carry by the mains lead.
- Do not close doors on mains lead, or pull mains lead around sharp corners. Keep the mains lead away from hot or heated surfaces.
- Unplug the machine when not in use. Turn off all controls before unplugging from electrical outlet.
- Do not unplug by pulling on the mains lead. Never handle the plug or machine with wet hands.
- Store machine in a dry place. Do not expose to freezing temperatures.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The boiler becomes hot when used. Move only by using the carrying handle.
- Do not stand on the machine.
- The equipment must be unplugged after use and before cleaning.
- This unit is a Class II appliance which means it is double insulated for your protection, no earthing wire is necessary. If the supply cord is damaged, it must be replaced by Ewbank or our appointed agents.
- If the plug is cut off from the mains lead, it must be disposed of safely. NEVER under any circumstances insert a plug which is cut off from the mains lead into socket.



Warning - Risk of injury

Caution! - Steam 100°C - Don't direct at people or animals




Cleaning Fabrics:

A number of materials and fabrics are NOT suitable to be cleaned by steam for example: Do not use on leather, wax polished furniture or floors, synthetics fabrics, velvet, Dralon or other delicate, steam-sensitive materials.

Steam Mop Rapid

Steam Mop Rapid Contents

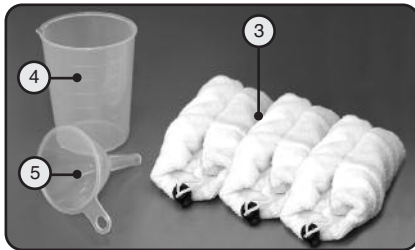

1. Steam Mop Rapid
2. Handle
3. 3x towelling cloths
4. Water jug
5. Funnel
6. Carpet glider




Please familiarise yourself with the product and accessories by reading this guide before use. Before using the product, please ensure that...

- The mains lead is in good condition.
- ALL packaging material has been removed from the product, and all accessories have been removed from the packaging and are accounted for.

Assembly Guide

Assembling the handle...

Slide the handle into the body of the steam mop, depressing the spring-button to allow it to enter into the body of the Steam Mop. Align the button with the hole in the body, and push the handle into the body until the button latches into the hole (1). Push the clear seal down to the body (2).

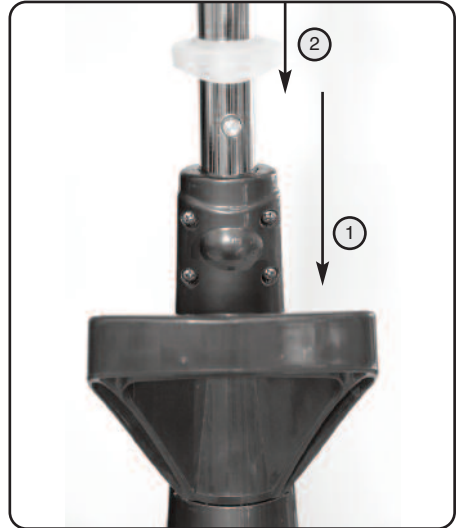

Steam Mop Rapid



Preparation of your work area.

- Clear the floor area as much as possible, remove furniture that can be removed.
- Dry vacuum the area thoroughly with your regular dry vacuum cleaner.
- Before using the steam mop on your floor surface, Ewbank recommend you test an area of floor with the steam mop first to ensure the prevention of an adverse effect.

Using your Steam Mop

- Do not operate the Steam Mop without the towel in the place.
- Place the towel onto the Steam Mop Head, and fasten by pulling the cord whilst holding the toggle (Fig.1).
- Fill the water tank with the cup and funnel provided, stopping at the maximum fill line. Do not over-fill the tank. Ensure the water tank cap is sealing before use (Fig.2).
- Plug the cord in and switch on. The Steam Mop will take less than a minute to reach operating temperature. The lamp on the front of the unit will indicate that the unit is switched on.
- Press the trigger on the handle (Fig.3) to emit steam from the Steam Mop. Release to stop steam emission.
- Pass the mop slowly over the area to be cleaned whilst pressing the trigger.
- For cleaning carpets, place the Steam Mop into the carpet glider (Fig.4).

E-tip A slow even passage will maximise the cleaning effect of the steam and will result in the floor area drying more quickly.

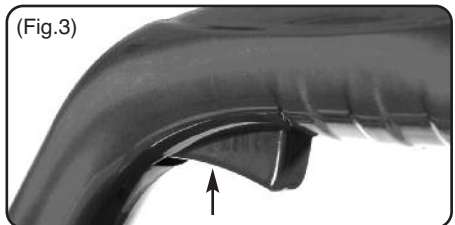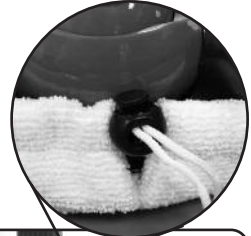

Steam Mop Rapid

Technical data

Voltage:	230-240v 50-60Hz
Boiler Power:	1500W
Weight:	2.0 kg
Water tank capacity:	0.75L
Mains lead length:	5m

INFORMATION ON THE DISPOSAL OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT KNOWN AS WEEE

Your attention is brought to new directives applicable to the disposal of this electrical equipment, where in accordance with the legislation this product must not be disposed of in your normal household waste. Instead it is your responsibility to dispose of this type of waste by handing it over to special designated collection points for recovery and recycling. This product is marked with a 'Wheelie bin' symbol with a cross on it to remind you of this action. The objective of this directive is to help conserve resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste please contact your local authority, take back facilities are free of charge.



Your Guarantee

This product is covered by a 12 month guarantee.
This does not cover normal wear and tear or abuse.
For guarantee purposes, please retain your original receipt as proof of purchase.
This guarantee does not affect your statutory rights.
For spares, service and further information please contact;
Customer Services, Ewbank Products Ltd, Billington Road, Burnley, Lancashire, BB11 5ED
Please phone our helpline Tel: 01282 835841 between 9am - 5.30pm Monday to Friday.
www.ewbank.co.uk

Made in China

2011 © Ewbank Products Ltd

EB0187 14/02/11