



INSTRUCTION MANUAL

EW0190

VERSACLEAN Cordless Floor Cleaner and Polisher

Ewbank has a British heritage to be proud of. It's a household favourite and much loved brand that has been providing innovative cleaning solutions for over 140 years.



CONTENTS

Safety Instructions.....	3 - 5
Appliance Overview	6
Operating Instructions.....	7 - 8
Cleaning & Maintenance	9
Troubleshooting	10
Specifications	11
Disposal of the Appliance	12
Warranty Terms & Conditions	13

SAVE THESE INSTRUCTIONS

Household use only.


- DO NOT:
 - Modify the unit in any way. It is dangerous voids the warranty
 - Handle the unit with wet hands

WARNING!


1. Follow the assembly process in this manual. The manual will give the important instructions about the assembly and safety
2. After unpacking, make sure that the product is intact with no visible signs of damage caused by transport, should you have any doubts, do not use the product, and call our Quality department. All packing materials (plastic wrapping, cardboard box, etc.) are potentially dangerous and must be kept out of children's reach
3. This product is only designed for domestic applications, any other usage is unsuitable and will not be covered by warranty
4. Before charging the product for the first time, check that the rating plate specifications on the adaptor correspond to your electrical power supply
5. The product must only be used with the charging adaptor supplied with the product or a replacement purchased from Ewbank or one of our distributors
6. Never use the charging station with multiple plug or extended power cord. The charging plug needs to fit directly into the socket
7. Do not plug the equipment into other devices such as timer, remote controlled device or similar equipment


8. Please do not leave the unattended product when it is powered on
9. After charging has finished, and you are removing from the wall socket, pull out by the plug of adaptor only, do not pull by the power cord
10. Before cleaning and maintaining the product, please remove the power cord from the outlet and switch off the machine
11. If the product stops working or there is an abnormal sound, please switch the power off and contact our Service Department
12. Never try to replace the power cord. If the cord or plug is damaged or needs to be replaced, then please contact our Service Department
13. NEVER use with flammable or combustible liquids such as gasoline, other volatile substances or burning embers
14. NEVER use in the presence of explosive liquids, vapors, or explosive dust such as coal or grain
15. This product can only be used by children aged from 14 years and above. Persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge must have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children must not play with the product
16. Never submerge in water. Otherwise, the motor will be at high risk of being burnt out. The product should be kept far away from heat sources (such as central heating radiators, ovens, etc.) to avoid damage to the product
17. Before using the product, please remove any large or sharp matter on the floor to avoid damaging the plastic parts, filter, and motor
18. Ensure the polisher is switched off at the on/off push button switch when removing the cleaning pads

19. In order to protect the battery, the unit cannot be switched on while it is being charged, the unit will not operate
20. If you are replacing the batteries, the old batteries must be correctly recycled. Never attempt to burn batteries
21. Ensure fingers, hair, jewelry etc. are kept away from rotating parts
22. Please use the product according to these instructions and use only Ewbank accessories
23. For initial charging, insert the power cord into the wall socket and the other end insert into the main body of the product, the indicator light on the front of the machine will display the charge level on the battery. It should take 4.5 hours for this process on the first charge
24. Always store in a cool place

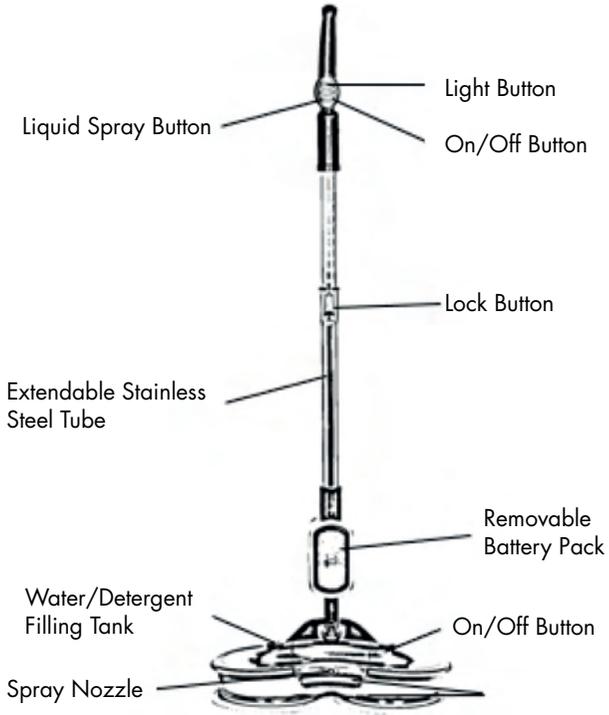


ACCESSORIES

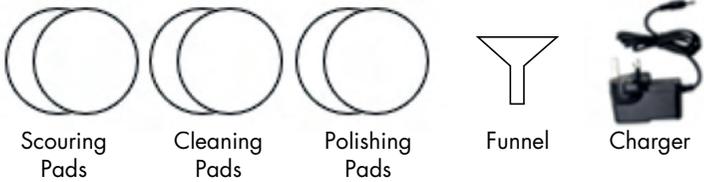

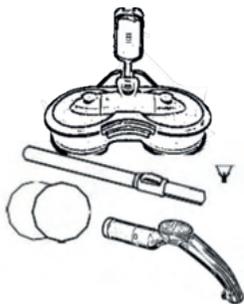

Take the main body and the two-part handle out of the box.

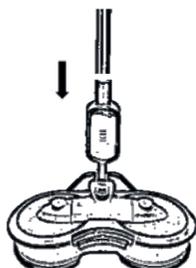

1. Attach telescopic part of handle

Slide the bottom end of telescopic handle onto the main body until it clicks into place. After connecting, please pull tightly to ensure the handle is securely locked in place.




2. Install batteries and fit top part of the handle


Open the battery cover in the back part of handle and insert the two AA batteries. Replace the battery cover. Connect the handle to the telescopic handle, until it clicks into place. After connecting, please pull tightly to ensure the handle is securely locked in place.



1. Make sure the pads are clean.
Twist and wring out any excess water

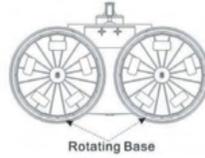

2. Fix the pads to the rotating base

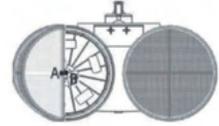


3. Ensure the pads are central on each base.
Press pads firmly onto the rotating bases



4. Fill the spray container with water



5. Clear the surface of debris and foreign objects.
We suggest a quick vacuum before cleaning

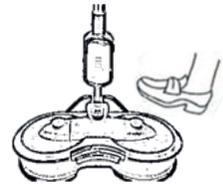

6. Step on the switch to power the rotating bases
in the head unit




7. Press the power button on the handle to power the sprayer.
Ensure you have fitted batteries



8. When required, press the spray button on the handle

Caring for your cleaning pads – fit correctly in use

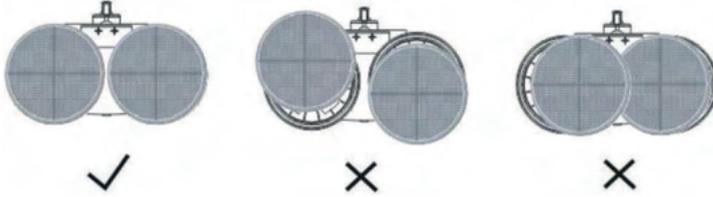

Caring for your cleaning pads – washing



When machine washing, apply a little detergent to each pad directly.



When hand washing, rub the two pads together to scrub them clean



Twist and wring out any excess water.



Remove all debris from the pads to avoid damage to the floor when cleaning.



Wash separately from other items.



Never use bleach or fabric softener on the pads

TROUBLESHOOTING

If you experience difficulties with the appliance, please check the suggestions below before contacting customer services on 01473 271272:

PROBLEM	POSSIBLE SOLUTION
The Cordless Polisher/Cleaner won't start?	<ul style="list-style-type: none"> • Please ensure the product has been sufficiently charged • Ensure the charging cable has been tightly inserted • Please ensure the batteries in the handle are not empty and that they have been installed correctly • Please ensure the normal running time of 25 minutes has not been exceeded
The pads and pump won't turn on?	<ul style="list-style-type: none"> • Please press the foot switch on the top of the polisher head to start the machine. The LED lights will come on as an indicator
Excessive water is left on the floor	<ul style="list-style-type: none"> • Please ensure the pads are not full of soaked up water
Excessive vibrations in the head of the unit.	<ul style="list-style-type: none"> • Please ensure that the pads have been installed centrally on the rotating heads
There is an unusual noise when cleaning.	<ul style="list-style-type: none"> • The unit will emit a light "buzzing" sound. This is normal • Other noising could be caused by foreign objects attached to the cleaning pads

Model:	EW0190 VERSACLEAN
Rated Voltage:	Input: 100-240V, 50/60Hz Output: 14.8V 2200mAh
Rated Power:	80W
Water Tank Capacity:	350ml
Product Dimensions:	H:1390 x W:450 x D:230
Net Weight:	4.1kg

Disposal Information

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.





Ewbank Warranty Terms & Conditions

This product is guaranteed for a period of 24 months as standard from the date of purchase against mechanical and electrical defects.

To qualify for the warranty, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The warranty will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
Ewbank, 38 Bluestem Road,
Ipswich, Suffolk, IP3 9RR**

Please quote the Product Code and the PO Number on the rating label and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the warranty period you will be charged for the repair and any carriage costs.



Your Guarantee

This product is covered by a 2 year guarantee.

This does not cover normal wear and tear or abuse.

For guarantee purposes, please retain your original receipt as proof of purchase.

This guarantee does not affect your statutory rights.

For spares, service and further information please contact;

UK Address: Ewbank, 38 Bluestem Road, Ipswich, Suffolk, IP3 9RR

EU Address: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR

Tel: 01473 271 272

Disclaimer: Ewbank operate a policy of continual improvement and development.

We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.

All diagrams and images shown in this manual are for illustration purposes only.